

Flip Video Instructions

1. Turn on the camera using the button on the side of the camera.
2. Take your video by pressing the red button to start the video and pressing the red button again to stop the video.
3. When you are finished taking your videos plug the camera into the USB drive on your computer.
4. When you plug in the camera, the Flipshare Software will automatically open.
5. At the left side of your screen you will see a list...click Camcorder.
6. Your videos will show on the screen. Choose the video you want to edit first and click on the scissors below that video.
7. Edit the video to start and stop where you want it to, but remember to leave a little extra video at the end for any transitions you may have following that clip. Then click Save As...you will save it to the January folder and rename it so can find it.
8. Repeat steps 5-7 until you have edited all the clips you will use for your movie.
9. At the bottom of your screen you will see icons to choose from. Click on Create Movie.
10. Drag and drop the clips you want to include and place them in the order you want for the movie.
11. Click next and follow the instructions on the screen to create your movie.
12. When you are finished and have selected Create Movie, you will see the program working at the bottom left of your screen. It will let you know when the movie has been created.
13. On the left side of your screen select My Movies. Your new movie will be in the folder! Congratulations. Now you can select share at the top of the screen and let all of your friends see what you've created. Happy movie making!